

Washer Will Not Spin: A Quick Home Checklist

Capital Appliance Repair Winnipeg - homeowner guide

Work through these in order

1. Unplug and wait a minute

A quick power reset clears many one-off control faults. Plug back in and try a spin-only cycle.

2. Redistribute the load

A heavy item bunched to one side trips the balance sensor. Spread clothes evenly and remove a few items.

3. Check the lid switch or door lock

The drum will not spin unless the lid switch or door latch clicks shut. Listen for the click.

4. Clear the drain pump filter

Standing water means it cannot drain, so it will not spin. Clean the filter at the lower front panel.

5. Look at the drive belt or coupler

If the motor hums but the drum stays still, a worn belt or coupler is the likely cause.

6. Call a Winnipeg technician

If it still will not spin, the motor, control board, or bearings may need a pro. Book a service call.

Still stuck? Capital Appliance Repair Winnipeg offers same-day service across Winnipeg.